

Bogen Multicom intercom System time change

Lift the handset and press to display **-Main Menu-**.

```

- Main Menu -
1 - Emergency
2 - Audio Program
3 - Media
-----
4 - External
5 - Setup
6 - Manual Tone
7 - Call Forward
8 - Outside Line
9 - Media Control
    
```

Note: Diagrams include menu selections not immediately displayed (those beneath the dashed line). Press the scroll buttons on the MCDS3 to view these selections. Press to escape.

Select the **- Setup -** menu by pressing . A display will prompt you to enter the password.

```

Please
Enter
Password
-----
    
```

Enter the correct password.

Enter the password by pressing the appropriate number keys. The factory password is (the password can be changed to provide security). If an incorrect password is entered, an error message will be displayed and you will be prompted to re-enter the password. When the correct password is entered, the **- Setup -** menu will be displayed:

```

- Setup -
1 - Day/Time
2 - Program Events
3 - Time Zones
-----
4 - Page Zones
5 - Software Rev.
6 - Init/Diagnost
7 - Arch-Station
0 - Escape
    
```

Press from the **- Setup -** menu to set the day of the week and time of day.

Note: Diagram includes menu selections not immediately displayed (those beneath the dashed line). Press the scroll buttons on the MCDS3 to view these selections. Press to escape.

↓

```

- Day/Time -
1 - Day of Week
2 - Time of Day
0 - Escape
    
```

The **- Day/Time -** menu will appear.

To set the time of day, press . A display will prompt you to enter the desired time in 24-hour format. Enter the desired time by pressing the corresponding keys.

```

- Set Time -
(24 Hr. Format)
* - Enter ----- # - Exit
    
```

Press to display **- Set Time -** menu. The current time in the system will be displayed and the cursor will be positioned at the first position.

Press to enter the information into the system (will not work until 4th digit is dialed).

Press to exit to **- Day/Time -** menu.